



## iGo auto/air40 Compatibility Chart

<b>Brand</b>	<b>Model Number</b>	<b>iGo Power Tip</b>
Accurian	ADP-3955	D01
APEX Digital	PD-500	D00
Audiovox	D1500	D01
Audiovox	D1500B	D01
Audiovox	D1705	D01
Audiovox	D1708	D01
Audiovox	D1708PK	D01
Audiovox	D1712	D01
Audiovox	D1805	D01
Audiovox	D1805PK	D01
Audiovox	D1812	D01
Audiovox	D1812PK	D01
Audiovox	D1812PKG	D01
Audiovox	VBP 700	D01
Audiovox	VBP-500	D01
Audiovox	VBP-800	D01
Audiovox	VBP45	D01
Audiovox	VBP50	D01
Audiovox	VBP70	D01
Audiovox	VBP80	D01
Cyberhome	CH-LDV 1010A	D05
Cyberhome	CH-LDV 1010B	D05
Cyberhome	CH-LDV 3550	D05
Cyberhome	CH-LDV 700	D05
Cyberhome	CH-LDV 7000	D05
Cyberhome	CH-LDV 700B	D05
Cyberhome	CH-LDV 702	D05
Cyberhome	CH-LDV 707B	D05
Cyberhome	CH-LDV 712	D05
Cyberhome	CH-LDV 9000	D05
GoVideo	DP5040	D00
GoVideo	DP5050	D00
GoVideo	DP6040	D00
GoVideo	DP6240	D00
GoVideo	DP7040	D00
GoVideo	DP7240	D00
GoVideo	DP8240	D00
GoVideo	DP8440	D00
Magnavox	MPD850	D02
Mintek	MDP-1010	D01
Mintek	MDP-1020	D01



Mintek	MDP-1030	D01
Mintek	MDP-1070	D01
Mintek	MDP-1720	D01
Mintek	MDP-1750	D01
Mintek	MDP-1760	D01
Mintek	MDP-1770	D01
Mintek	MDP-1810	D01
Mintek	MDP-1815	D01
Mintek	MDP-1880	D01
Mintek	MDP-5860	D01
Mintek	MDP-5861	D01
Mintek	MFD-102C	D01
Mintek	MFD-120C	D01
Panasonic	DVD-LA95	D01
Panasonic	DVD-LS50	D01
Panasonic	DVD-LS55	D01
Panasonic	DVD-LV50	D01
Panasonic	DVD-LV75	D01
Panasonic	DVD-LX8	D01
Philips	PET724	D01
Pioneer	PDV-LC20BA	D01
Polaroid	PDM-0082	D04
Polaroid	PDM-0711	D04
Polaroid	PDM-0714	D04
Polaroid	PDM-0722	D04
Polaroid	PDM-0723	D04
Polaroid	PDM-0724M	D04
Polaroid	PDM-0725	D04
Polaroid	PDM-0742	D04
Polaroid	PDM-0743	D04
Polaroid	PDM-0801A	D04
Polaroid	PDM-0810A	D04
Polaroid	PDM-0817	D04
Polaroid	PDM-0820	D04
Polaroid	PDM-0821	D04
Polaroid	PDM-0822BD	D04
Polaroid	PDM-0824	D04
Polaroid	PDM-0825M	D04
Polaroid	PDM-0990DS	D04
Polaroid	PDM-1008N	D04
Polaroid	PDM-1035	D04
Polaroid	PDM-1040	D04
Polaroid	PDM-1040BD	D04
Polaroid	PDM-1058	D04
Polaroid	PDV-0560M	D04



Polaroid	PDV-0700	D04
Polaroid	PDV-0700K	D04
Polaroid	PDV-0700S	D04
Polaroid	PDV-0701A	D04
Polaroid	PDV-0707N	D04
Polaroid	PDV-0713A	D04
Polaroid	PDV-0713B	D04
Polaroid	PDV-0740M	D04
Polaroid	PDV-0744M	D04
Polaroid	PDV-0750S	D04
Polaroid	PDV-077PT	D04
Polaroid	PDV-0800S	D04
Polaroid	PDV-0801A	D04
Polaroid	PDV-0802M	D04
Polaroid	PDV-0813A	D04
Polaroid	PDV-0820S	D04
Polaroid	PDV-0820T	D04
Polaroid	PDV-0821T	D04
Polaroid	PDV-0823A	D04
Polaroid	PDV-088PT	D04
Polaroid	PDV-1002A	D04
Polaroid	PDV-1008N	D04
Polaroid	PDV-1042M	D04
Polaroid	PDV-523M2	D04
Samsung	DVD-L100	D02
Samsung	DVD-L1200	D02
Samsung	DVD-L200	D02
Samsung	DVD-L300	D02
Samsung	DVD-L300A	D02
Sony	DVP-FX1021	D04
Sony	DVP-FX700	D04
Sony	DVP-FX701	D04
Sony	DVD Walkman D-VE7000S	D03
Toshiba	SDP-2500	D03
Toshiba	SD-P1400	D03
Toshiba	SD-P1600	D03
Toshiba	SD-P2600	D03
Toshiba	SD-P2700	D03