



## iGo auto/air40 Compatibility Chart

| <b>Brand</b> | <b>Model Number</b> | <b>iGo Power Tip</b> |
|--------------|---------------------|----------------------|
| Accurian     | ADP-3955            | D01                  |
| APEX Digital | PD-500              | D00                  |
| Audiovox     | D1500               | D01                  |
| Audiovox     | D1500B              | D01                  |
| Audiovox     | D1705               | D01                  |
| Audiovox     | D1708               | D01                  |
| Audiovox     | D1708PK             | D01                  |
| Audiovox     | D1712               | D01                  |
| Audiovox     | D1805               | D01                  |
| Audiovox     | D1805PK             | D01                  |
| Audiovox     | D1812               | D01                  |
| Audiovox     | D1812PK             | D01                  |
| Audiovox     | D1812PKG            | D01                  |
| Audiovox     | VBP 700             | D01                  |
| Audiovox     | VBP-500             | D01                  |
| Audiovox     | VBP-800             | D01                  |
| Audiovox     | VBP45               | D01                  |
| Audiovox     | VBP50               | D01                  |
| Audiovox     | VBP70               | D01                  |
| Audiovox     | VBP80               | D01                  |
| Cyberhome    | CH-LDV 1010A        | D05                  |
| Cyberhome    | CH-LDV 1010B        | D05                  |
| Cyberhome    | CH-LDV 3550         | D05                  |
| Cyberhome    | CH-LDV 700          | D05                  |
| Cyberhome    | CH-LDV 7000         | D05                  |
| Cyberhome    | CH-LDV 700B         | D05                  |
| Cyberhome    | CH-LDV 702          | D05                  |
| Cyberhome    | CH-LDV 707B         | D05                  |
| Cyberhome    | CH-LDV 712          | D05                  |
| Cyberhome    | CH-LDV 9000         | D05                  |
| GoVideo      | DP5040              | D00                  |
| GoVideo      | DP5050              | D00                  |
| GoVideo      | DP6040              | D00                  |
| GoVideo      | DP6240              | D00                  |
| GoVideo      | DP7040              | D00                  |
| GoVideo      | DP7240              | D00                  |
| GoVideo      | DP8240              | D00                  |
| GoVideo      | DP8440              | D00                  |
| Magnavox     | MPD850              | D02                  |
| Mintek       | MDP-1010            | D01                  |
| Mintek       | MDP-1020            | D01                  |



|           |            |     |
|-----------|------------|-----|
| Mintek    | MDP-1030   | D01 |
| Mintek    | MDP-1070   | D01 |
| Mintek    | MDP-1720   | D01 |
| Mintek    | MDP-1750   | D01 |
| Mintek    | MDP-1760   | D01 |
| Mintek    | MDP-1770   | D01 |
| Mintek    | MDP-1810   | D01 |
| Mintek    | MDP-1815   | D01 |
| Mintek    | MDP-1880   | D01 |
| Mintek    | MDP-5860   | D01 |
| Mintek    | MDP-5861   | D01 |
| Mintek    | MFD-102C   | D01 |
| Mintek    | MFD-120C   | D01 |
| Panasonic | DVD-LA95   | D01 |
| Panasonic | DVD-LS50   | D01 |
| Panasonic | DVD-LS55   | D01 |
| Panasonic | DVD-LV50   | D01 |
| Panasonic | DVD-LV75   | D01 |
| Panasonic | DVD-LX8    | D01 |
| Philips   | PET724     | D01 |
| Pioneer   | PDV-LC20BA | D01 |
| Polaroid  | PDM-0082   | D04 |
| Polaroid  | PDM-0711   | D04 |
| Polaroid  | PDM-0714   | D04 |
| Polaroid  | PDM-0722   | D04 |
| Polaroid  | PDM-0723   | D04 |
| Polaroid  | PDM-0724M  | D04 |
| Polaroid  | PDM-0725   | D04 |
| Polaroid  | PDM-0742   | D04 |
| Polaroid  | PDM-0743   | D04 |
| Polaroid  | PDM-0801A  | D04 |
| Polaroid  | PDM-0810A  | D04 |
| Polaroid  | PDM-0817   | D04 |
| Polaroid  | PDM-0820   | D04 |
| Polaroid  | PDM-0821   | D04 |
| Polaroid  | PDM-0822BD | D04 |
| Polaroid  | PDM-0824   | D04 |
| Polaroid  | PDM-0825M  | D04 |
| Polaroid  | PDM-0990DS | D04 |
| Polaroid  | PDM-1008N  | D04 |
| Polaroid  | PDM-1035   | D04 |
| Polaroid  | PDM-1040   | D04 |
| Polaroid  | PDM-1040BD | D04 |
| Polaroid  | PDM-1058   | D04 |
| Polaroid  | PDV-0560M  | D04 |



|          |                       |     |
|----------|-----------------------|-----|
| Polaroid | PDV-0700              | D04 |
| Polaroid | PDV-0700K             | D04 |
| Polaroid | PDV-0700S             | D04 |
| Polaroid | PDV-0701A             | D04 |
| Polaroid | PDV-0707N             | D04 |
| Polaroid | PDV-0713A             | D04 |
| Polaroid | PDV-0713B             | D04 |
| Polaroid | PDV-0740M             | D04 |
| Polaroid | PDV-0744M             | D04 |
| Polaroid | PDV-0750S             | D04 |
| Polaroid | PDV-077PT             | D04 |
| Polaroid | PDV-0800S             | D04 |
| Polaroid | PDV-0801A             | D04 |
| Polaroid | PDV-0802M             | D04 |
| Polaroid | PDV-0813A             | D04 |
| Polaroid | PDV-0820S             | D04 |
| Polaroid | PDV-0820T             | D04 |
| Polaroid | PDV-0821T             | D04 |
| Polaroid | PDV-0823A             | D04 |
| Polaroid | PDV-088PT             | D04 |
| Polaroid | PDV-1002A             | D04 |
| Polaroid | PDV-1008N             | D04 |
| Polaroid | PDV-1042M             | D04 |
| Polaroid | PDV-523M2             | D04 |
| Samsung  | DVD-L100              | D02 |
| Samsung  | DVD-L1200             | D02 |
| Samsung  | DVD-L200              | D02 |
| Samsung  | DVD-L300              | D02 |
| Samsung  | DVD-L300A             | D02 |
| Sony     | DVP-FX1021            | D04 |
| Sony     | DVP-FX700             | D04 |
| Sony     | DVP-FX701             | D04 |
| Sony     | DVD Walkman D-VE7000S | D03 |
| Toshiba  | SDP-2500              | D03 |
| Toshiba  | SD-P1400              | D03 |
| Toshiba  | SD-P1600              | D03 |
| Toshiba  | SD-P2600              | D03 |
| Toshiba  | SD-P2700              | D03 |