

Specifications

Output Voltage:	4.2-6 VDC
Output Power:	Up to 5 Watts
Output Current:	Varies (up to 800mA)
Dimensions:	3.6 x 1.9 x .89" (94.44 x 48.266 x 22.61mm)

Safety Features

- Current limit
- Short circuit protection
- Thermal protection

Package Contents

- iGo emergency charger
- 2 AA batteries
- User guide

iGo[®]

emergency charger



For use with:



User Guide

Congratulations on your iGo[®] power purchase! Compatible with today's most popular devices, this iGo emergency charger uses two standard AA batteries to add hours of runtime to all of your devices. Use the iGo emergency charger to power your mobile phone, Bluetooth[®] headset, smartphone/PDA, MP3 player, portable gaming device and more with this single, convenient power solution.

Patented iGo[®] Tip Technology

iGo power products deliver the precise amount of power required by your device through the use of patented tip technology. This way, you don't have to worry about selecting the correct amount of power as you do with other products – we do it for you! Simply attach the appropriate iGo power tip (sold separately) and you are ready to get energized.

Quick Connect Guide

Carefully read this Quick Connect Guide before using this iGo charger for the first time. Incorrect usage can result in your equipment not charging. iGo power tips are required (sold separately).

1. **TO OPEN:** Hold the unit logo side up with the bottom towards you. Push the latch to the left while pulling the case apart to remove battery cover.
2. Insert AA batteries as indicated by battery diagrams and replace battery cover.
3. Plug the appropriate iGo power tip onto the charger.
4. Insert the power tip connector into the device you wish to charge.
5. Turn on charger. Blue indicator light should be illuminated.
6. To replace the batteries in your unit, use new AA batteries and repeat steps 1 through 3.

Note: Flashing blue light indicates that the batteries are low and have less than 25% of power remaining.



Unit may shut off prematurely when used with select devices. If this occurs, turn the unit off and disconnect from the device. Wait 10 minutes and connect again.

For best results:

- Charge your device before its battery becomes fully exhausted.
- Charge your device while it is off.
- Use premium batteries for maximum runtime.

Before using this charger, please read this important information:

- Turn off and disconnect when charging is complete.
- Turn off and disconnect when the batteries in the charger are depleted.
- Some devices may display inaccurate battery charge indications when connected.
- Do not mix new and old batteries.
- Do not mix battery chemistries.
- Remove batteries from this charger when not in use for extended periods of time.
- The charger batteries may become warm during the charging process. Wait for batteries to cool before removing them.
- From a fully discharged device battery, it may take several minutes of charging for the device to become operable.
- Some device/tip connections may not be able to support the weight of the charger unit. Charge these devices on a flat surface.

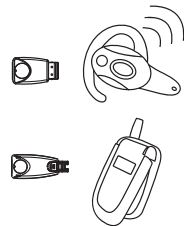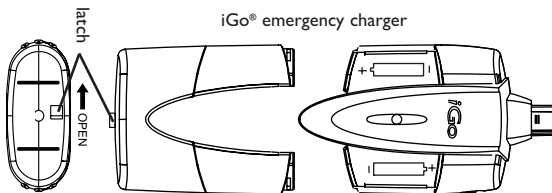

Additional iGo® power tips
(sold separately)